

Moog 4-Channel Mixer

The Moog 4-Channel Mixer features built-in power distribution for a compact and convenient way to power your new Moog Sound Studio.

POWER


First, attach the barrel-to-barrel connectors from the power inlets on each of the instruments in your Moog Sound Studio to the barrel jacks labeled **THRU** on the Mixer.

After the instrument power cables are connected, connect the power supply for the Moog Sound Studio to the barrel jack labeled **IN**, located on the left side of your Mixer's front panel. Lastly, plug the power supply into an outlet. A red LED to the left of the **IN** jack will light up to show that power is active.

AUDIO

The 4-Channel Mixer has four audio inputs on 1/4" jacks located on the front panel. They can be used as four mono channels or two stereo channels. The two switches on the rear panel select stereo or mono operation for Group A (Channels 1 & 2) and Group B (Channels 3 & 4).

The inputs are summed to mono or stereo according to the switch settings, and the summed mix appears at the 3.5mm stereo headphone output on the front panel. The output level is controlled by the **VOLUME** knob located to the right of the headphone output.

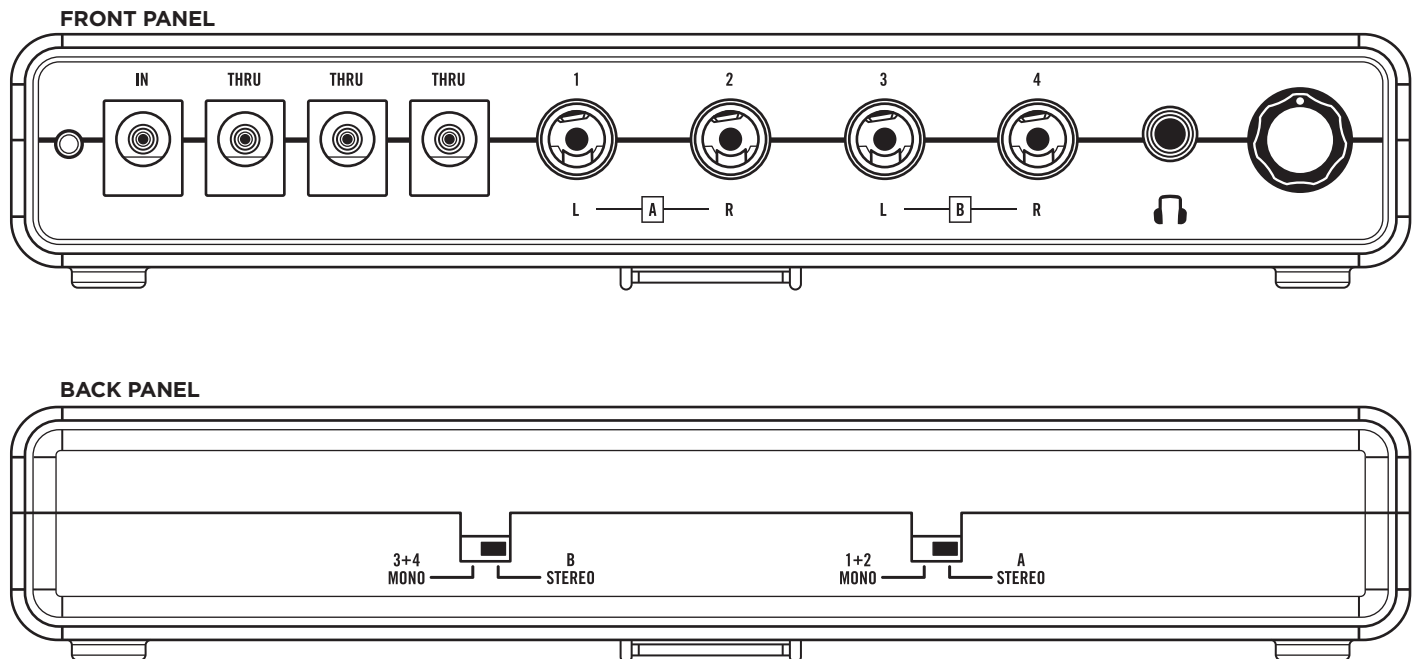

WARNING: Do not use this product near water. To reduce risk of fire or electric shock, do not expose this product to rain or moisture, including—but not limited to—near a bathtub, washbowl, or kitchen sink; in a wet basement; or near a swimming pool or the like.